

Fixed IP User Guide



Content



- User Guide For HUAWEI H153-381 5G Router 3-7
- User Guide For ZTE MC888S 8-20


User Guide

HUAWEI H153-381

5G Router



User Guide For HUAWEI H153-381 5G Router

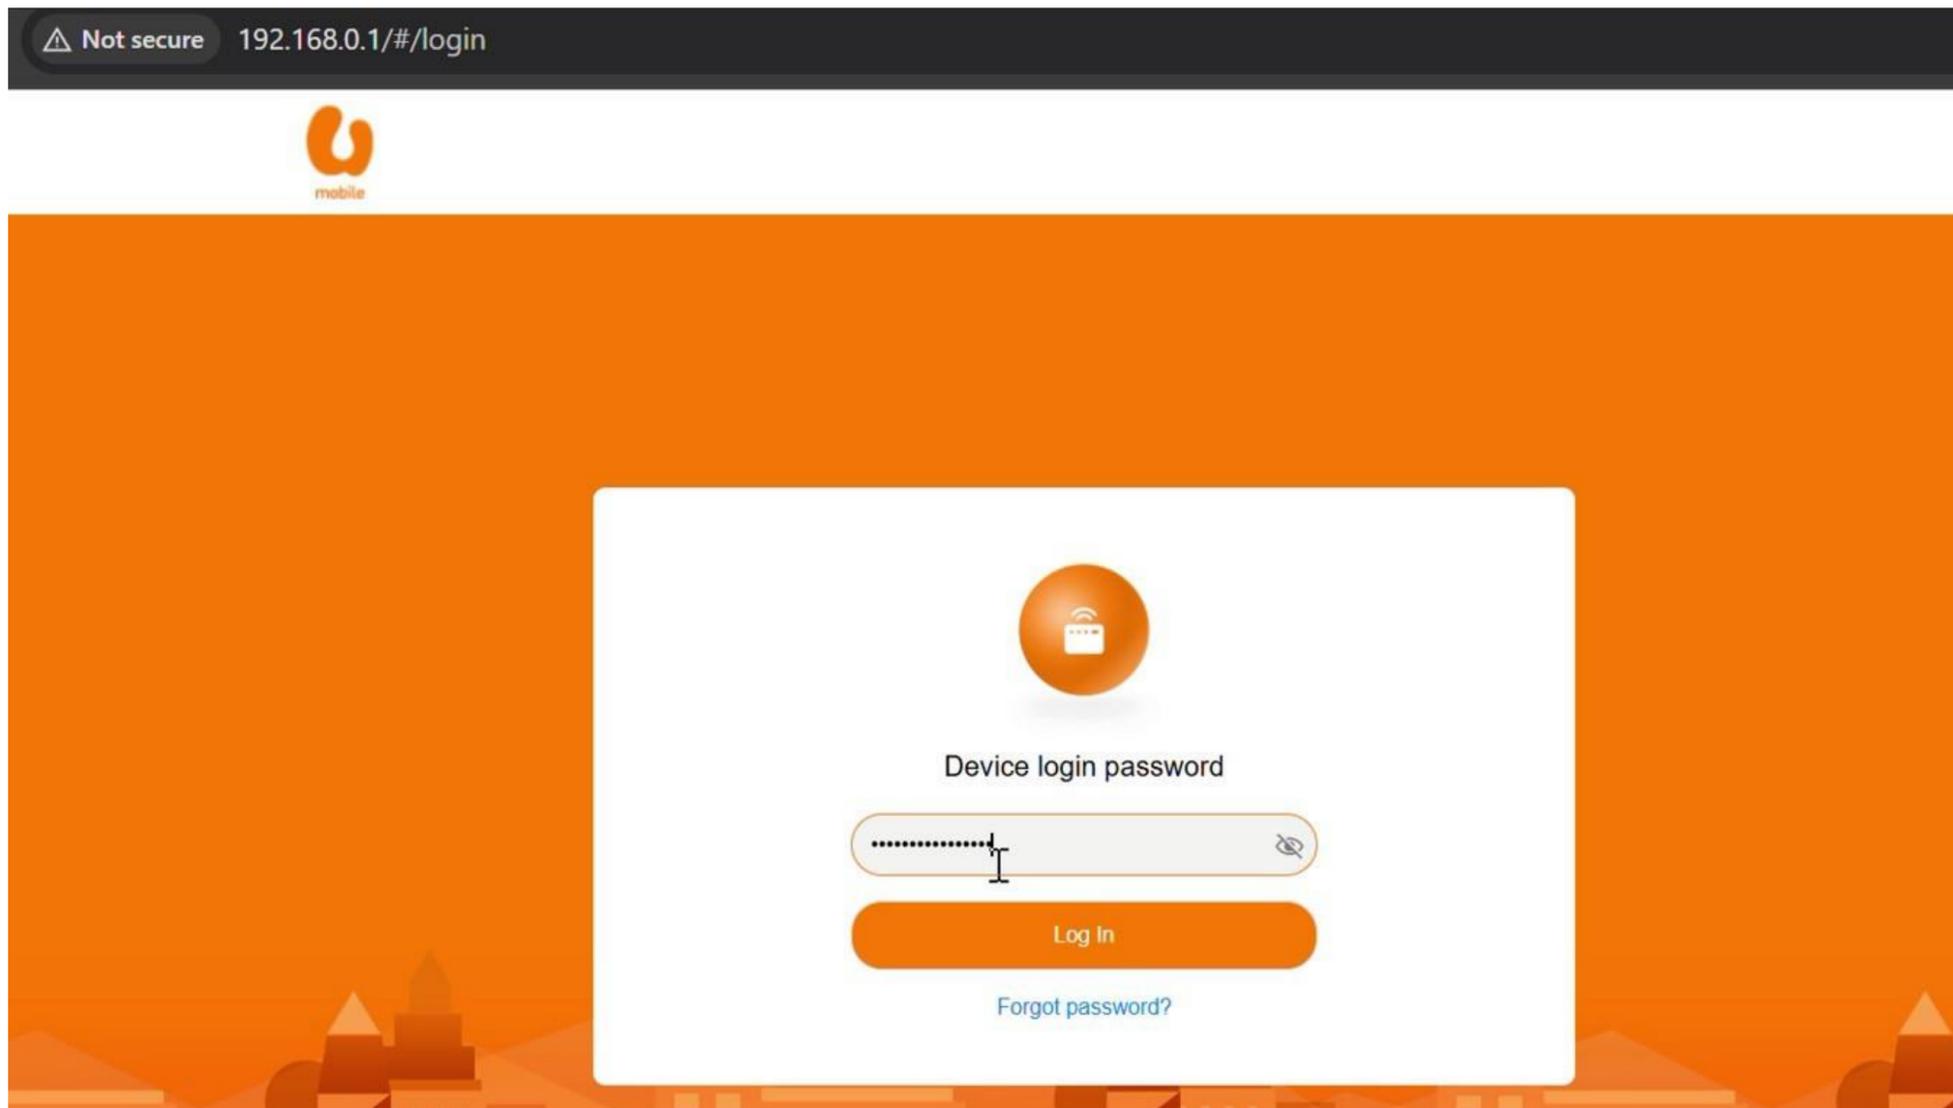


Step 1:

Ensure your device is connected to the **U Biz 5G Huawei Router**.

Open a web browser, enter **192.168.0.1**, and log in (default password: admin).


User Guide For HUAWEI H153-381 5G Router

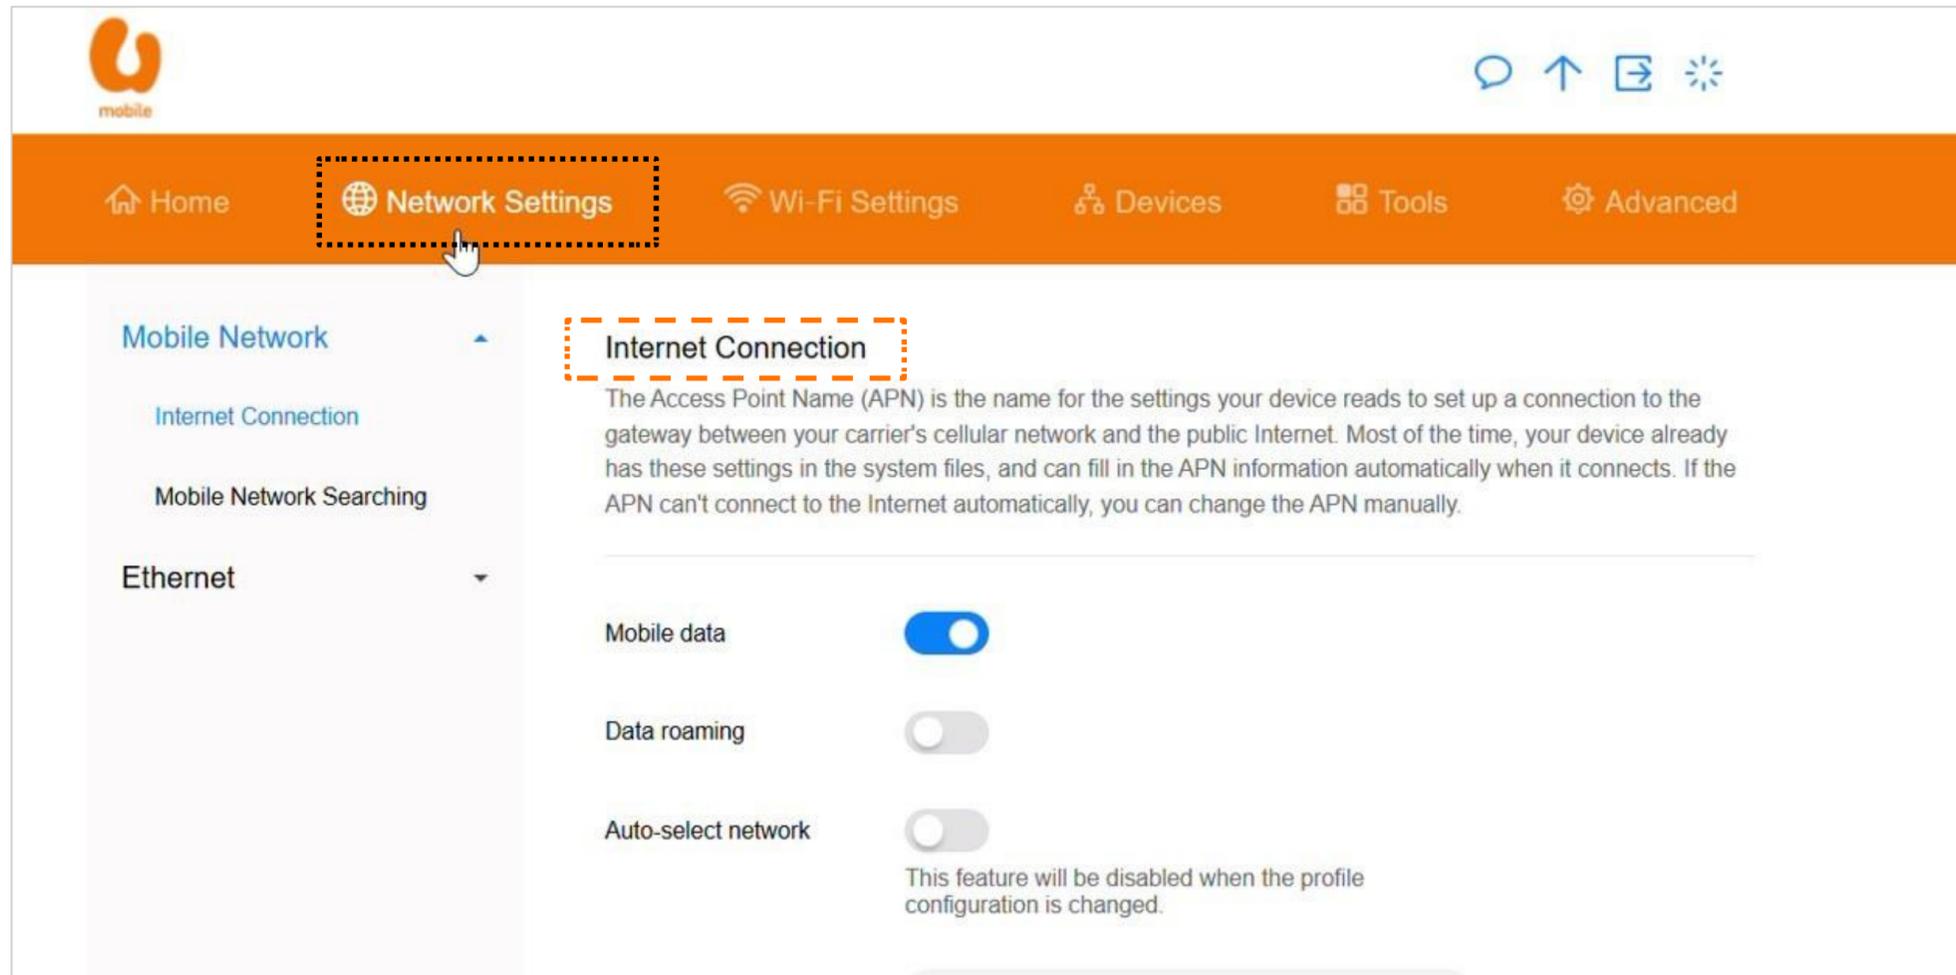

Step 2 :

Click **"Network Settings"** >
"Internet Connection"

User Guide For HUAWEI H153-381 5G Router

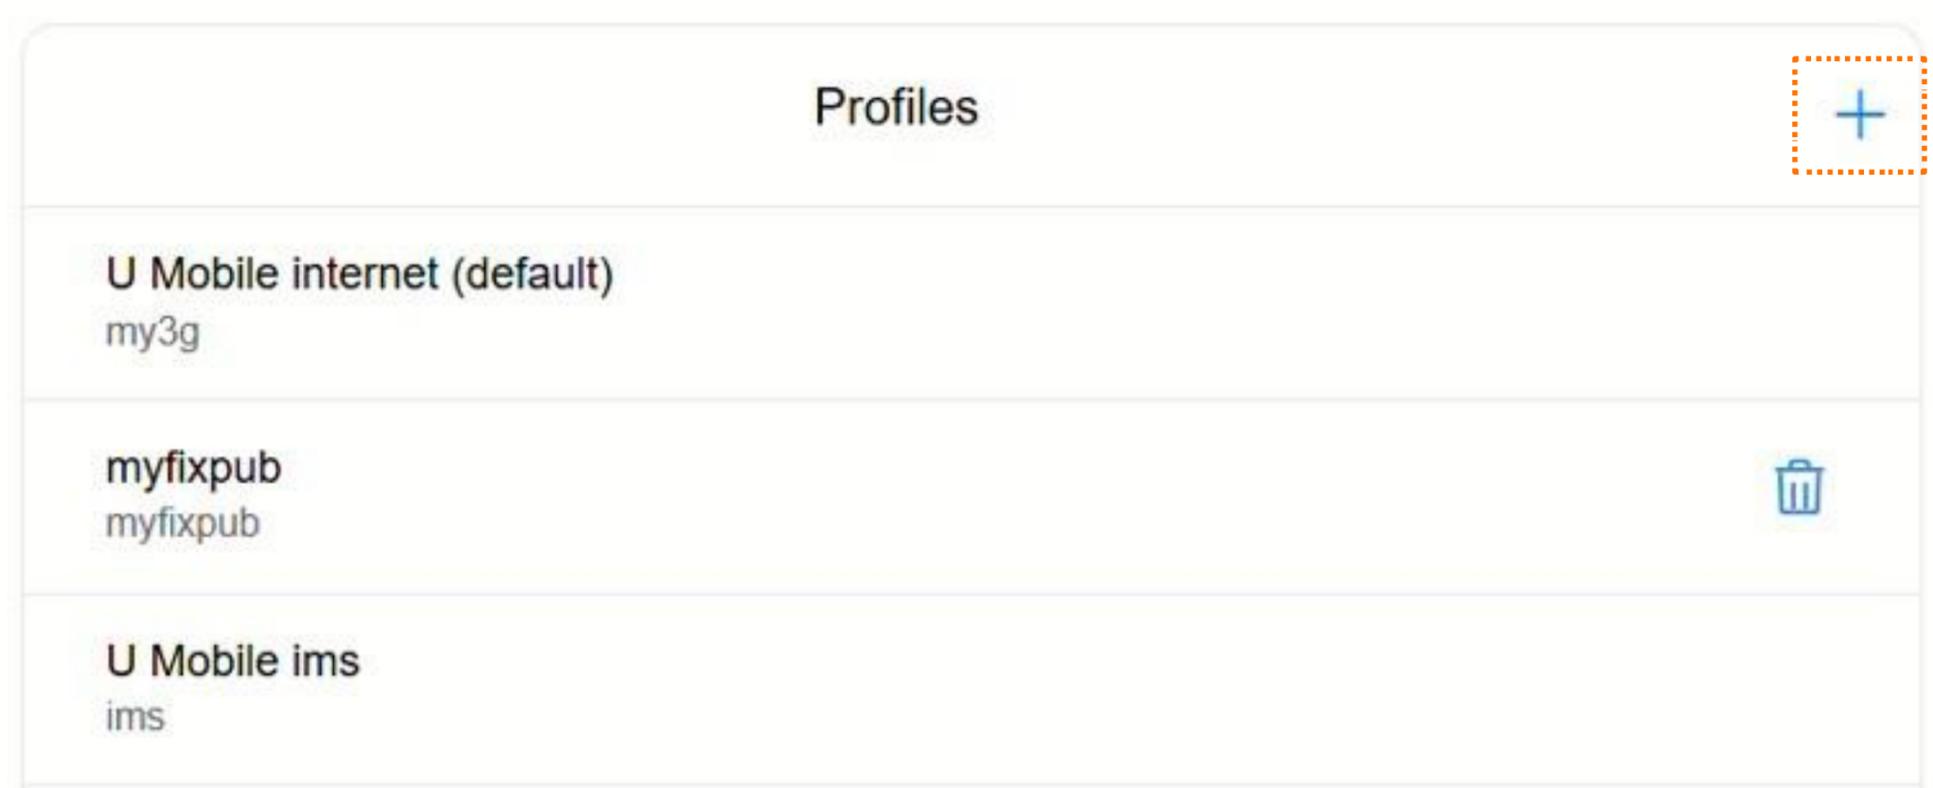

Step 3 :

Scroll to the "Profiles" section and add a new APN by click on "+"

User Guide For HUAWEI H153-381 5G Router



Profile Management

Profile name 1

Set as Default Profile 2

APN 3

User name

Password

4

Step 4 :

Enter the following details:

1. Profile Name: **my3gpub**
2. Set as Default Profile: **"Yes"**
3. APN: **my3gpub**
4. Click **"Save"**

Allow up to 5 minutes for the network to refresh.

User Guide For ZTE MC888S




User Guide For Upcoming ZTE 5G Router



How to Change APN for Fixed IP on Your ZTE 5G Router

1. Ensure your device is connected to the U Biz 5G ZTE Router.
2. Open a web browser, enter 192.168.0.1, and log in (default password: admin).
3. Click "Setting" > "APN", then scroll to the "APN" section.
4. Click "Add New" and key in the following info:
 - a. Profile Name: my3gpub
 - b. APN: my3gpubClick "Apply". A message prompt appears and click "Yes"
Click "Set as default"
5. Click "Back" twice to return to the main page.
6. When the device is up, click the 5G toggle to turn it to "ON" from "OFF".
7. Allow up to 5 minutes for the network to refresh.

How to Change APN for Fixed IP on ZTE 5G Router

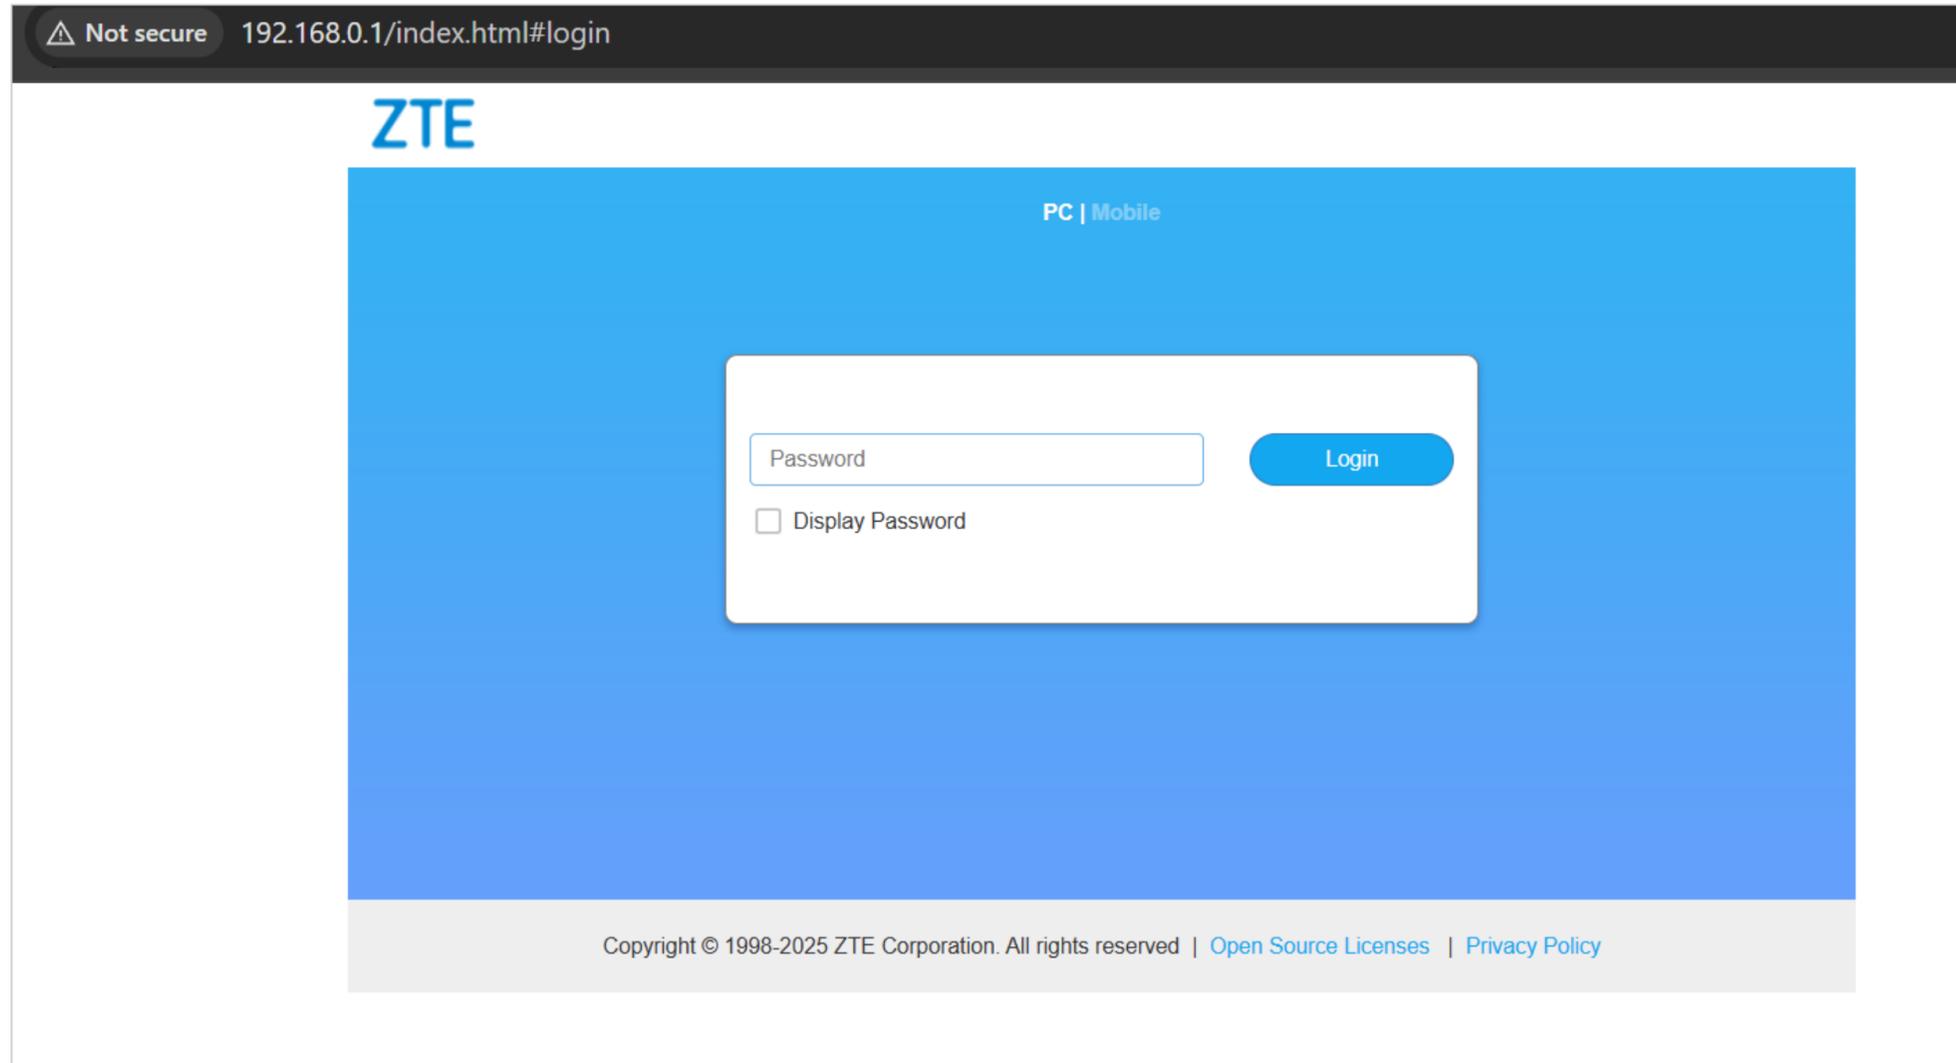

Step 1 :

Open a web browser, enter **192.168.0.1**, and log in using the default password: admin.

How to Change APN for Fixed IP on ZTE 5G Router



Step 2 :
Navigate to **"Settings"**

How to Change APN for Fixed IP on ZTE 5G Router




ZTE

SSID 2.4GHz:ZTE_D3D89E;SSID 5GHz:ZTE_D3D89E...

5G U Mobile



Modify Login Password Logout

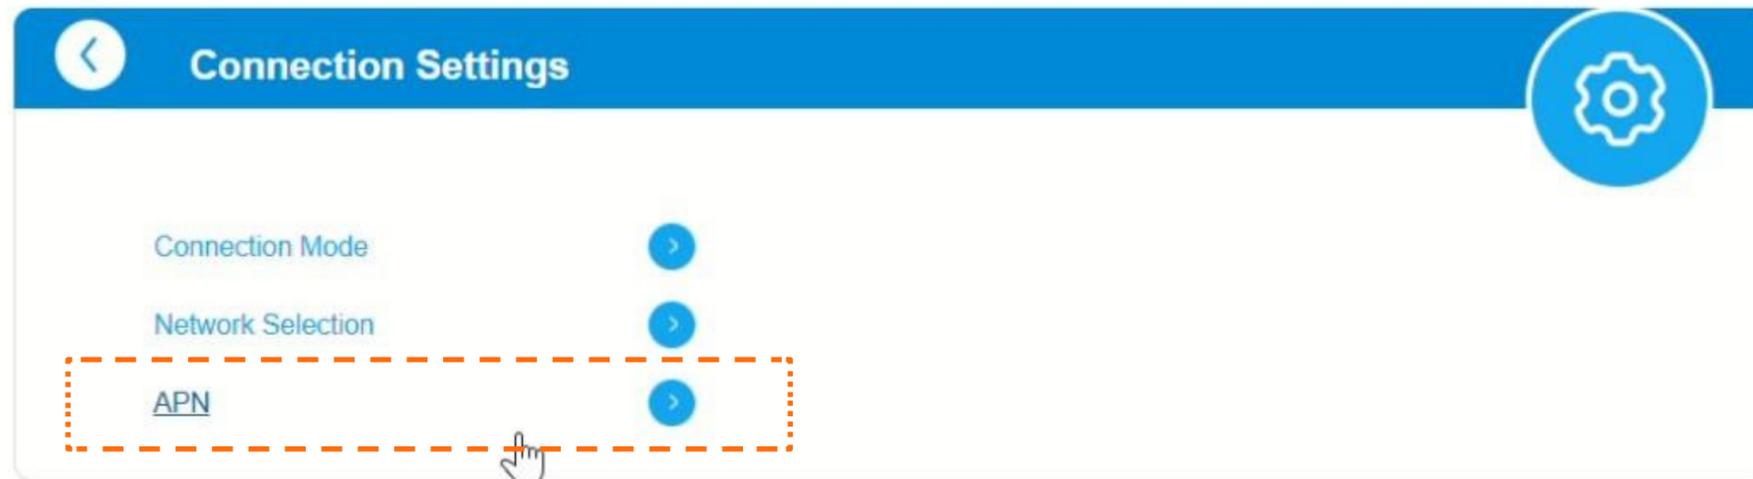

Step 3 :
Click **"APN"**

How to Change APN for Fixed IP on ZTE 5G Router



ZTE
SSID 2.4GHz:ZTE_D3D89E,SSID 5GHz:ZTE_D3D89E...;

5G U Mobile [Modify Login Password](#) [Logout](#)

APN

Current APN: U Mobile Internet

Mode: Auto Manual

Profile: Default

PDP Type: IPv4v6

Profile Name *: Default

APN *:

Authentication: NONE

User Name:

Password:

The setting can only be changed when the modem is disconnected.

Step 4 :
Click **"Add New"**.

How to Change APN for Fixed IP on ZTE 5G Router



The screenshot shows the ZTE 5G Router's web interface. At the top, the ZTE logo is on the left, and status indicators for "5G U Mobile" and signal strength are on the right. Below the status bar, there are links for "Modify Login Password" and "Logout". The main content area is titled "APN" and contains the following fields:


- Current APN: U Mobile Internet
- Mode: Auto Manual
- Profile: Default (with a "Cancel" button)
- PDP Type: IPv4v6
- Profile Name *: my3gpub (highlighted with a dashed orange box and a "1" in a circle)
- APN *: my3gpub (highlighted with a dashed orange box and a "2" in a circle)
- Authentication: NONE
- User Name: (empty field)
- Password: (empty field)
- Apply button (highlighted with a dashed orange box and a "3" in a circle)

A note at the bottom of the form states: "The setting can only be changed when the modem is disconnected."

Step 4 :
Click "**Add New**".

- Enter the following details:
1. Profile Name: **my3gpub**
 2. APN: **my3gpub**
 3. Click "**Apply**"

How to Change APN for Fixed IP on ZTE 5G Router

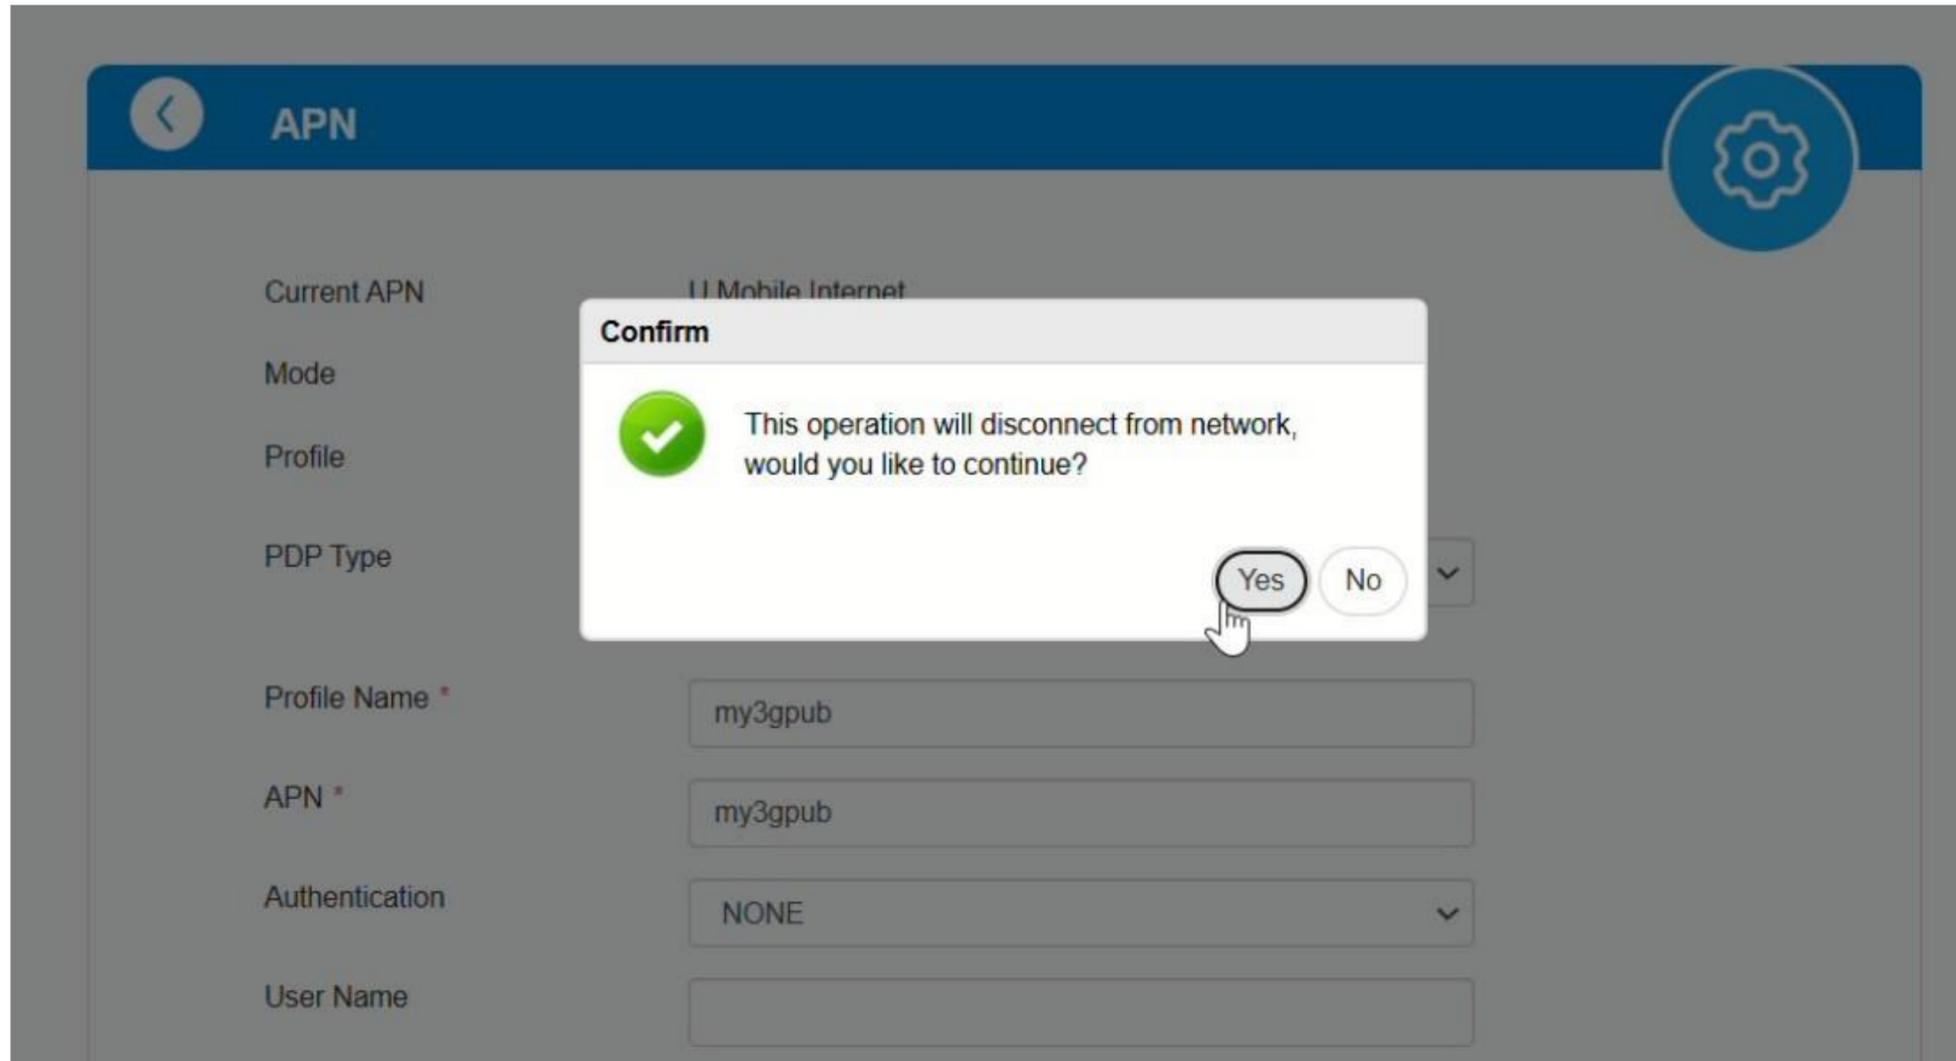

Step 5 :

Click **"Yes"** to confirm.

The network will disconnect and may take a few minutes to restore.

How to Change APN for Fixed IP on ZTE 5G Router



ZTE
SSID 2.4GHz:ZTE_D3D89E,SSID 5GHz:ZTE_D3D89E...;

5G U Mobile [Modify Login Password](#) [Logout](#)

APN

Current APN: U Mobile Internet

Mode: Auto Manual

Profile: [Cancel](#)

PDP Type:

Profile Name *:

APN *:

Authentication:

User Name:

Password:

[Set as default](#)

The setting can only be changed when the modem is disconnected.

Step 6 :
Click **"Set as default"**

How to Change APN for Fixed IP on ZTE 5G Router



ZTE
SSID 2.4GHz:ZTE_D3D89E,SSID 5GHz:ZTE_D3D89E...;

5G U Mobile [Modify Login Password](#) [Logout](#)

APN

Current APN: U Mobile Internet

Mode: Auto Manual

Profile: [Cancel](#)

PDP Type:

Profile Name *:

APN *:

Authentication:

User Name:

Password:


[Set as default](#)

The setting can only be changed when the modem is disconnected.

Step 6 :
Click **"Set as default"**

Click **"Back"**

How to Change APN for Fixed IP on ZTE 5G Router

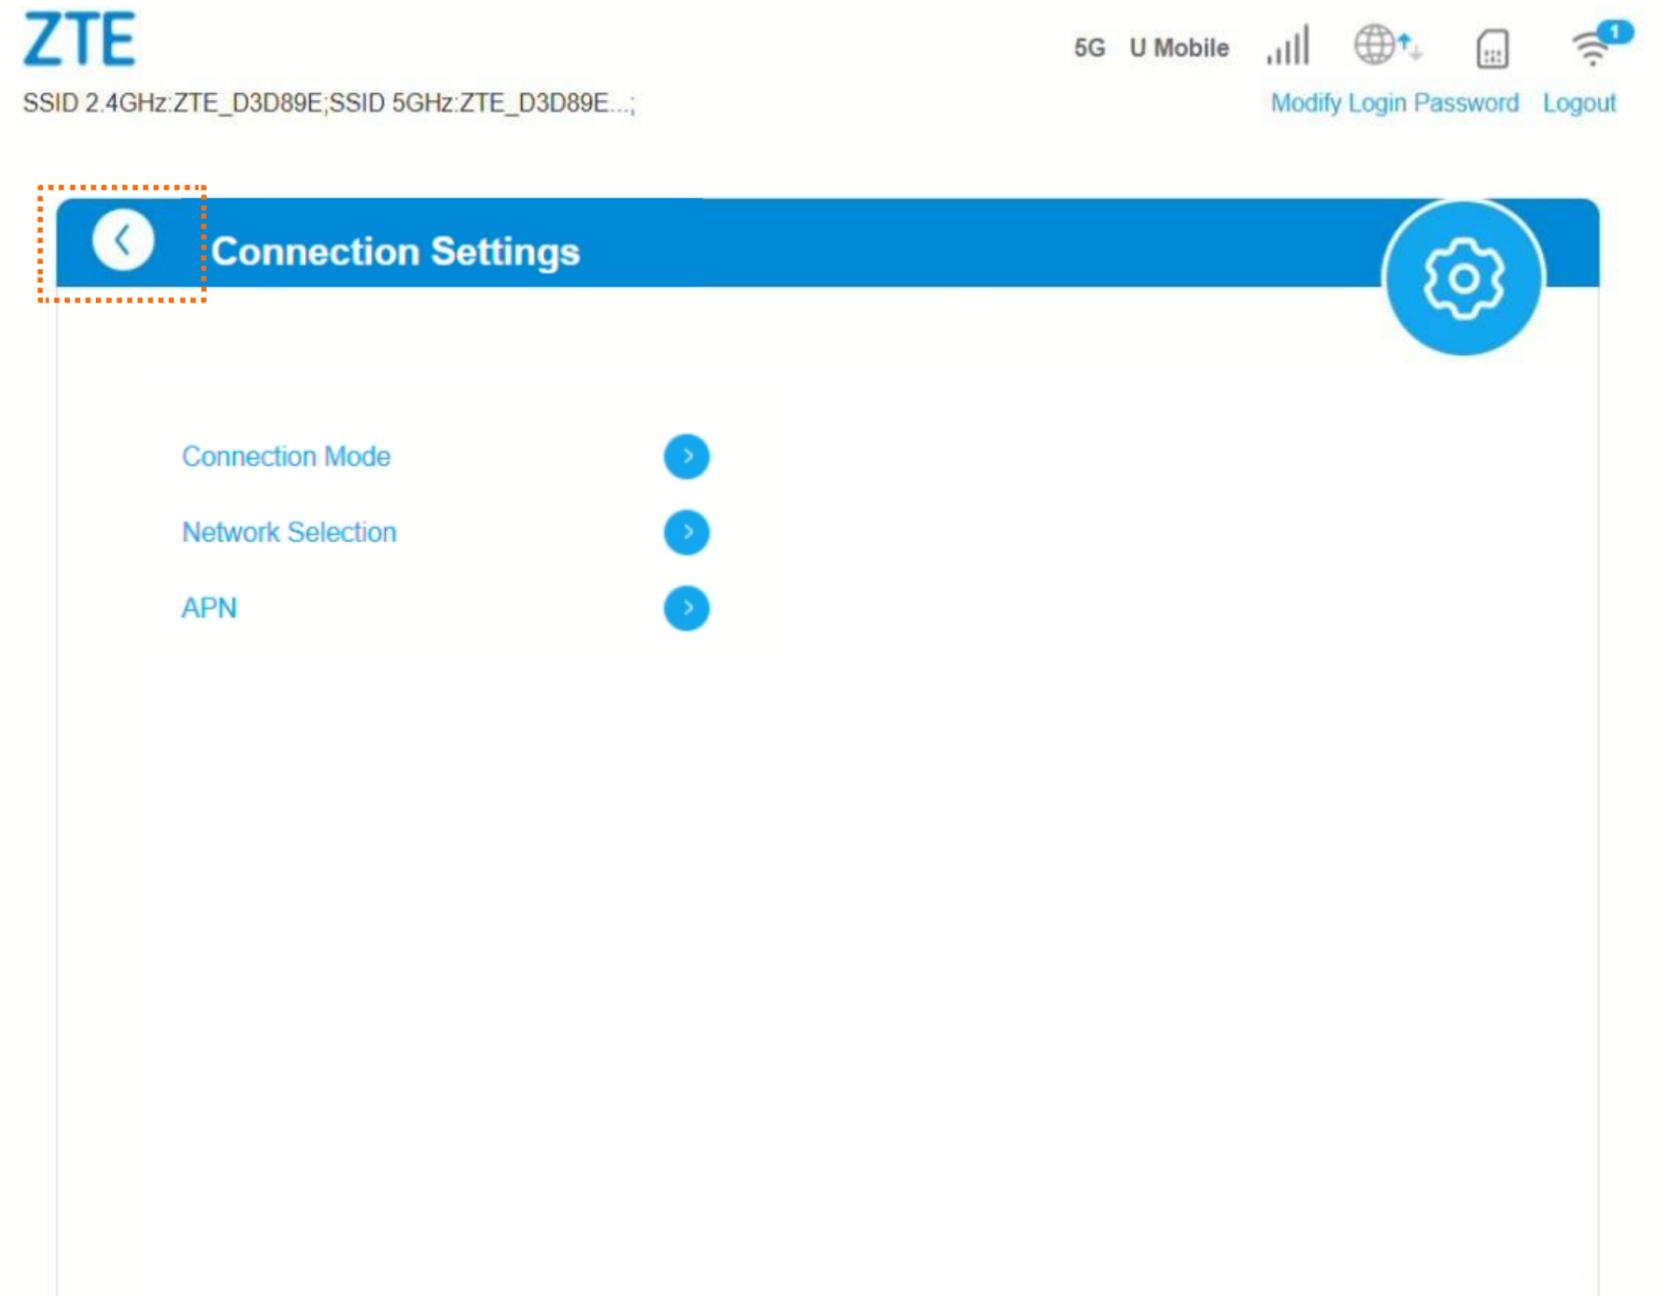

Step 6 :

Click **"Set as default"**

Click **"Back"**

Click **"Back"** again to return to the main page

How to Change APN for Fixed IP on ZTE 5G Router



Step 7 :

When the device is up, toggle 5G to **"ON"**

How Can We Help You?

If you have any questions, feel free to contact our
U Business Support team at:

enterprise.support@u.com.my

Terms and Conditions Apply.